

**VESTIL MANUFACTURING CORP.**  
2999 N. Wayne St., Angola, IN 46703  
Ph: 260-665-7586 · Fax: 260-665-1339  
E-mail: sales@vestil.com · Website: www.vestil.com

# OWNER'S MANUAL

## MODEL OCTO-55

Serial number \_\_\_\_\_


Assembly / Installation Instructions ..... 1  
Safety Label Identification .....2

Warranty ..... 2

### IMPORTANT NOTES, WARNINGS AND SAFETY INSTRUCTIONS

Ensure that all employees understand and follow the following.

- ☞ Failure to read and understand this owner's manual before using or servicing the OCTO-55 constitutes a misuse of the product. All persons who will use or care for this product must be familiar with this material.
- The load must be removed before any work is performed on the OCTO-55.
- Ensure that all safety and warning labels stay in place and are legible.
- Do not use the OCTO-55 if any damage or unusual noise is observed.
- The OCTO-55 is intended for use only on compacted, improved surfaces.
- Contact the manufacturer for any needed MSDS information.
- ◆ Do not perform any modifications to the OCTO-55 without the manufacturer's approval. Failure to receive authorization for changes to the equipment could void the warranty.
- ◆ Maintenance and repairs are to be done only by personnel qualified to perform the required work. Consideration will not be given for warranty repair charges without prior written authorization by the manufacturer.

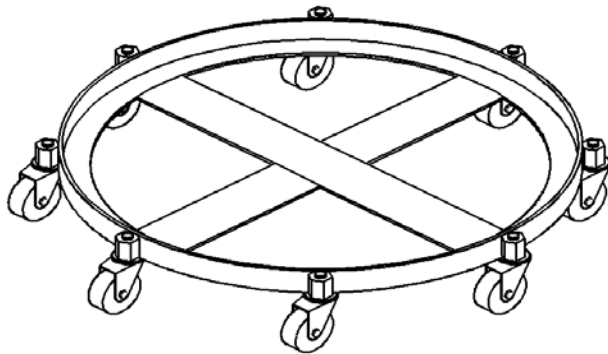

### WHEN ORDERING REPLACEMENT PARTS:

We take pride in using quality parts on the equipment we manufacture. We are not responsible for equipment problems resulting from the use of unapproved replacement parts.

To order replacement or spare parts for this equipment, contact the factory.

In any communication with the factory please be prepared to provide the machine's serial number, which is indicated on the machine dataplate.

### RECEIVING INSTRUCTIONS

Every unit is thoroughly tested and inspected prior to shipment. However, it is possible that the unit could incur damage during transit.

Inspect the unit closely when it arrives. *If you see evidence of damage or rough handling to either the packaging or to the product when it is being unloaded, immediately make a note of it on the Bill Of Lading!*

It is important that you remove the product's packaging upon its arrival to ensure that there is no concealed damage or to enable a timely claim with the carrier for freight damage.

Also verify that the product and its specifications are as ordered.

## ASSEMBLY INSTRUCTIONS –

*Review this entire page before assembling the OCTO-55.*

- Modifications or additions to the OCTO-55 without prior manufacturer's authorization may void the OCTO-55's warranty.
- Assembly must be performed by suitably trained personnel with access to the appropriate equipment.

For typical assembly of a standard OCTO-55 you will need the following:

1. A wrench to tighten the caster nuts on the OCTO-55.

To assemble a standard OCTO-55:

1. One caster at a time, insert the stem into a socket welded to the outside of the drum ring.
2. Using the nuts provided, tighten one nut down on the stem of the stem caster until it is tight.
3. Repeat step two until all casters are installed.

## LOADING INSTRUCTIONS –

- *Ensure that all employees involved in the operation of this OCTO-55 understand and follow these instructions!*

### Loading:

The load rating, in pounds, is shown on a sticker located on the side of the OCTO-55. It indicates the net capacity of the OCTO-55 with a static load that is centered and evenly distributed

*Note:* The addition of any ancillary equipment to the OCTO-55 by third parties must be taken into account when determining the maximum working load to be placed on the OCTO-55.

*Warning:* Do not exceed the OCTO-55'S load ratings. Injury to personnel or permanent damage to the OCTO-55 could result from exceeding the listed capacity.

Ensure that all safety and warning labels stay in place and are legible. Refer to the labels page in this manual.

## ROUTINE MAINTENANCE & SAFETY CHECKS –


- *Warning: Care should be taken to identify all potential hazards and comply with applicable safety procedures before beginning work.*

### (A) Inspect daily for:

- 1.) Damage or structural deformation to the structural members, caster brackets, casters, etc
- 2.) All the information, safety, and warning labels being in place and in good condition.

## SAFETY LABEL IDENTIFICATION

\* Product safety signs or labels should be periodically inspected and cleaned by the product users as necessary to maintain good legibility for safe viewing distance -- ANSI 535.4 (10.21). Contact the manufacturer for replacement labels.

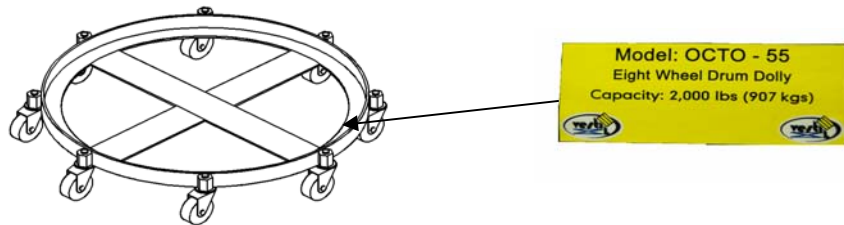

## PRODUCTS' WARRANTY

### 90 DAY LIMITED WARRANTY

The manufacturer warrants for the original purchaser against defects in materials and workmanship under normal use one year after date of shipment (not to exceed six months after date of manufacture). Any part that is determined by the manufacturer to be defective in material or workmanship and returned to the factory, shipping costs prepaid, will be, as the exclusive remedy, repaired or replaced at our option. Labor costs for warranty repairs and/or modifications are not covered unless pre-approved by the manufacturer or done at the manufacturer's facilities. Any modifications performed without prior written approval of the manufacturer may void warranty. This limited warranty gives purchaser specific legal rights which vary from state to state.

All specifications are subject to change without notice.

### LIMITATION OF LIABILITY

To the extent allowable under applicable law, the manufacturer's liability for consequential and incidental damages is expressly disclaimed. The manufacturer's liability in any event is limited to, and shall not exceed, the purchase price paid. Misuse or modification may void warranty.

Warranty does not cover labor or consequential damages including, but not limited to, business interruption costs, lost profits, or lost business opportunities.

### WARRANTY DISCLAIMER

The manufacturer has made a diligent effort to accurately illustrate and describe their products. However, such illustrations and descriptions are for the sole purpose of identification, and do not express or imply a warranty that the products are merchantable or fit for a particular purpose, or that the products will necessarily conform to the illustrations or descriptions.

The provisions of the warranty shall be construed and enforced in accordance with the Uniform Commercial Code and laws as enacted in the State of Indiana.

### DISPOSITION

Our company will make a good faith effort for prompt correction or other adjustment with respect to any product that proves to be defective within the Limited Warranty Period. Warranty claims must be made in writing within said year.